


U-SHACKLE LOCK ALARM (English)

The U-Shackle Lock/Alarm is designed to help protect your valuable possessions from theft in 2 ways: (1) If the shackle is cut, or (2) if the movement sensor is set the alarm will also sound if there is any vigorous movement of the lock.

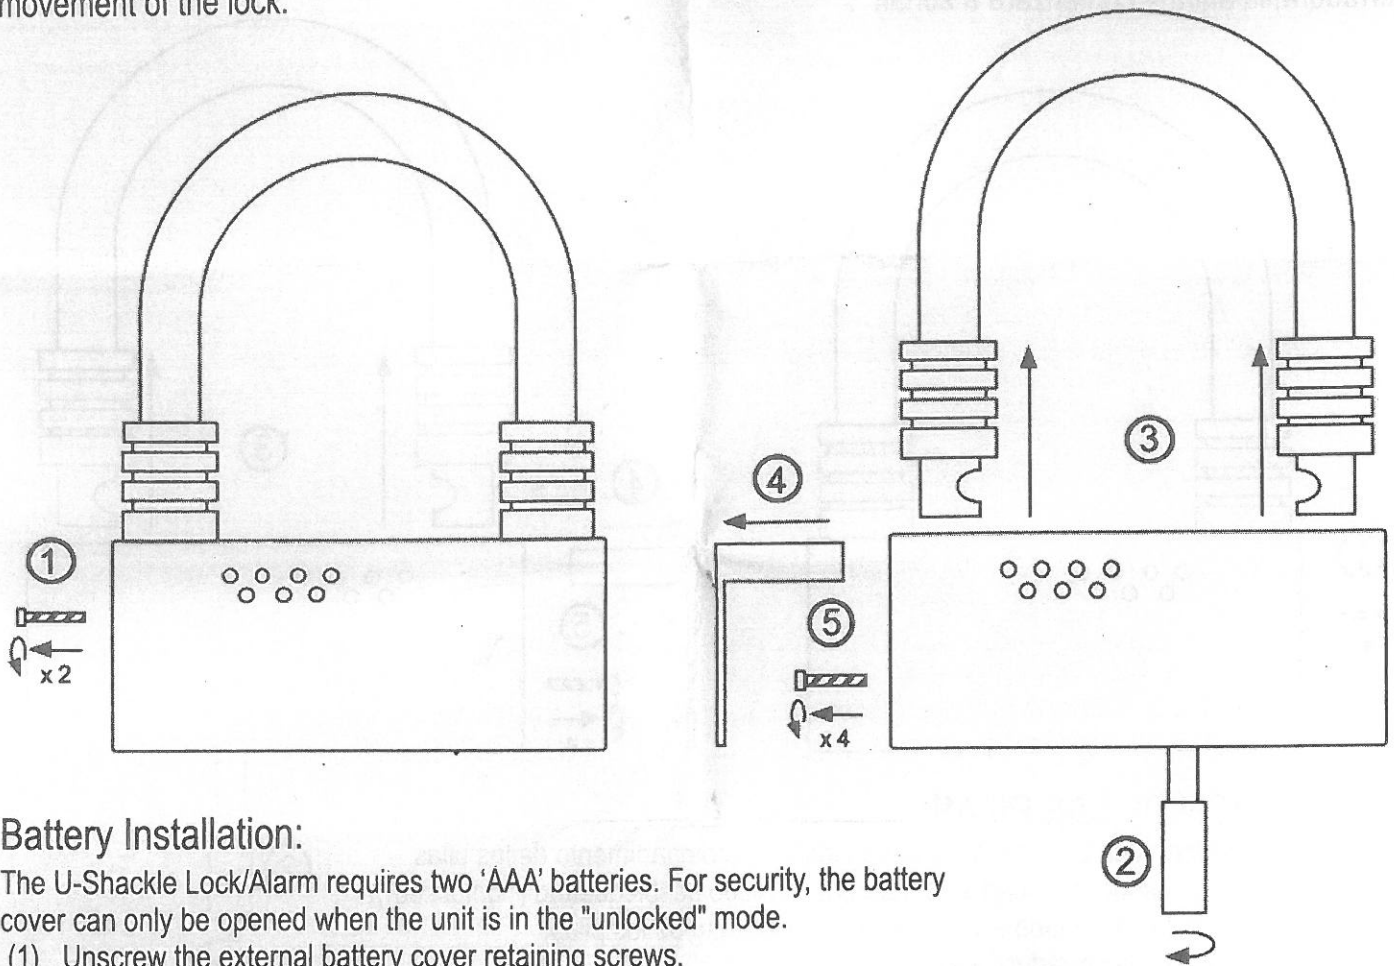

Battery Installation:

The U-Shackle Lock/Alarm requires two 'AAA' batteries. For security, the battery cover can only be opened when the unit is in the "unlocked" mode.

- (1) Unscrew the external battery cover retaining screws.
- (2) Insert key into the lock and unlock the unit.
- (3) Pull the shackle out of the lock unit.
- (4) Slide out the external battery cover from the lock casing.
- (5) Unscrew the internal battery cover retaining screws, remove the internal battery cover and fit 2 x good quality 'AAA' batteries (ensuring correct polarity as indicated on the battery cover). Replace the internal battery cover and tighten retaining screws fully. Replace external battery cover and tighten retaining screws fully.

Using the U-Shackle Lock/Alarm

1. Guide the shackle around the item(s) you wish to lock up. Ideally the shackle also needs to be passed around a fixed object eg. a post or a railing.
2. Insert both ends of the shackle into the lock holes and push in until you hear a "beep". The LED light will also begin flashing. The key should automatically turn in the lock as you do this. If not, then manually turn the key in the lock to the 'locked' position. It is now locked and alarmed. Important Note: for better protection against water ensure that both plastic caps on the shackle are firmly over the lips which surround the lock holes.
3. If the movement sensor feature is required, after locking the unit press the movement sensor activation button. You will hear another "beep". You have approximately 5 seconds to leave the U-Shackle Lock/Alarm and your item(s) before the lock is armed. After this period, if the lock detects any strong movement the alarm will start sounding. The alarm will then continue to sound for approximately 30 seconds before resetting.
4. To unlock the U-Shackle Lock/Alarm simply insert the key into the lock and turn until the shackle can be pulled out of the lock unit. When the shackle unlocks the alarm automatically disarms.

Replacement Keys: For security reasons, replacement keys will only be issued to users who have proof of purchase and have logged their key number via the website www.lockalarm.com. Once registered, in the event of key loss, the manufacturer will endeavour to supply a replacement key (a charge applies)

EXPERIENCING DIFFICULTIES? Email support@lockalarm.com or check the website www.lockalarm.com for troubleshooting hints.